
How to change TRX board:

First, the sonar must be Turn off. Once the sonar is off you have to open the TRU, for this you have to unscrew the 4 screws in the outside of it.




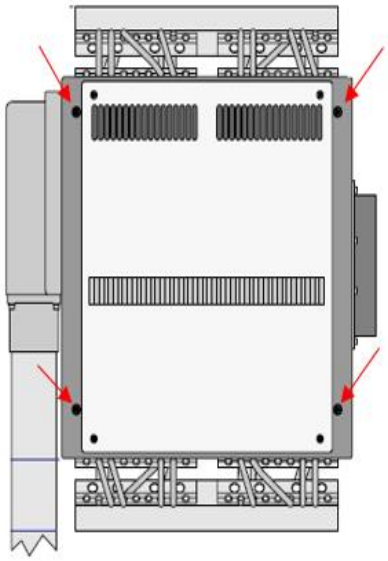

TRU and 4 screws to remove.

In the inside of the TRU you have to look for the Main power Supply Board and change the switch of it from “Remote” to “Off”. Them wait at least 30 seconds until the blue led will be off. The Main power Supply will be on the right side of the TRU.



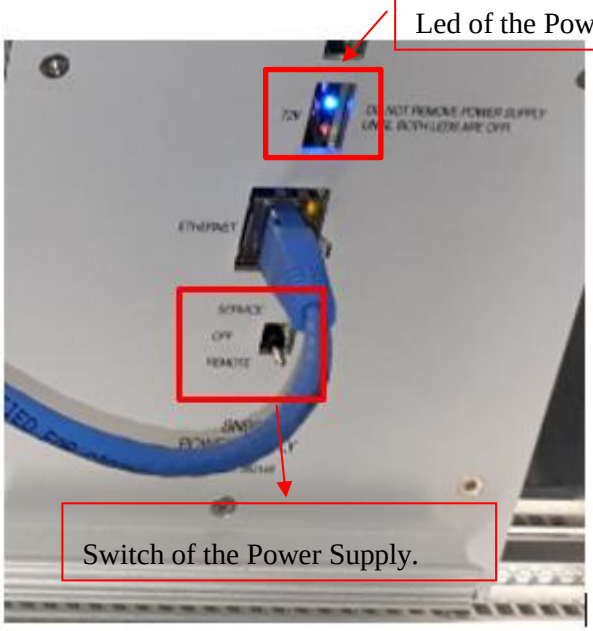

Main Power Supply.

Now you can change the TRX Boards, for that you have to loose the screw but not completed (once the screw move free is enough).

After that press the “two-red bottom” of the TRX, and move the black parts in the opposite side of the TRX and pull out.

From the right side to the left side, the numbers of the boards start with 0,1,2…to 11.



TRX boards.

To install the new, one just put it on the rail and push until you hear a soft “click”. Tight the screws of the boards.



On the Power Supply change the Switch from “off” to “Server” and after some seconds check if all the Led of the new boards are working. If everything is ok change again the Switch from “Server” to “Off” wait at least 30 second approx. (you must see the blue led off before change again) and them change from “off” to “Remote”.

Them close the TRU and tight the screws on the outside.